

Digital Analog Alarm Clock

Thank you for buying a RadioShack Digital Analog Alarm Clock. Your clock combines a simple design with a see-through digitally-produced analog display and advanced technology. It is ideal for your bedroom, kitchen, office, or almost any room.

63-1425

OWNER'S MANUAL
Please read before using this equipment.

FIRST

CLOCK FACE SYMBOLS

PM — appears for PM hours.

— appears when the alarm is on.

Zz — appears when snooze is activated.

AL — appears while setting the alarm or checking the set alarm time.

REMOVE THE PROTECTIVE FILM

Your clock's display is protected by a piece of film during shipping. Peel off the film before using the clock.

REMOVE THE BATTERY INSULATION STRIP


To prevent battery drain during shipping, your clock is shipped with a plastic battery insulation strip.

1. Press the battery compartment cover's tab in the direction of the arrow and lift the cover off.
2. Pull the tab to remove the plastic strip from the battery compartment on the bottom of your clock.
3. Replace the cover.

REPLACING THE BATTERIES

Your clock requires three type 357A button-cell batteries for power. When the display dims, replace the batteries.

1. Press the battery compartment cover's tab in the direction of the arrow and lift the cover off.
2. Remove the old batteries.
3. Insert three new batteries, positive (+) side up.
4. Replace the cover.

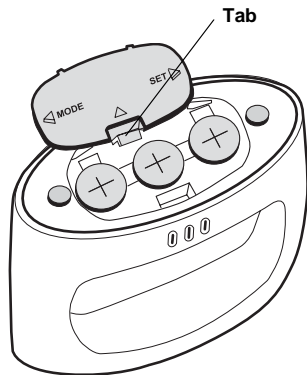

⚠ WARNING ⚠

Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

🔧 Battery Notes 🔧

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries.
- If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

SECOND

SETTING THE TIME

The clock uses a 12-hour format.


1. Press **MODE** three times.
2. Repeatedly press (or hold down) **SET** or **SNOOZE** to set the current time.
3. Press **MODE** once (or wait for 4 seconds) to save the setting.

SETTING THE ALARM

1. Press **MODE** twice. The hour and minute hands point to 12:00 (or the last set alarm time). **AL** flashes.
2. Repeatedly press (or hold down) **SET** or **SNOOZE** to set the desired alarm time.
3. Press **MODE** (or wait for 4 seconds) to save the setting.

To check the set alarm time, press **MODE** once. The alarm time and **AL** appear.

Bottom View

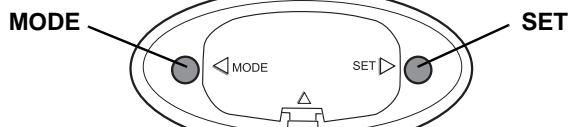

🔧 Note 🔧

- At 12:00, the hour and minute hands overlap, so only the minute hand is visible. The hour hand reappears when the minute hand advances one minute.
- Each time you press **SET** or **SNOOZE**, the minute hand advances one minute.
- If you do not press a button for about 4 seconds, the clock saves your settings and automatically returns to the current time.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your clock is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (1-800-843-7422) and follow the menu options. Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

Power Source	Three 357A Button-Cell Batteries (supplied)
Accuracy	0.67 Sec/Day
Battery Life (Continuous Use)	10 Months
Dimensions	3 ³ / ₈ × 2 ¹³ / ₁₆ × 1 ¹ / ₈ Inches (85 × 72 × 29 mm)
Weight (Without Batteries)	2.47 oz (70 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

THIRD

TURNING THE ALARM ON

1. Repeatedly press **MODE** until **AL** appears.
2. Press **SET** or **SNOOZE** to turn on the alarm. and **Zz** appear.
3. To return to the time display, press **MODE** three times or wait for 4 seconds.
At the preset alarm time, the alarm sounds for 1 minute. and **Zz** flash.
4. To silence the alarm sooner and turn snooze off, hold down any button for 2 seconds.


The alarm sounds again the next day at the same time.

TURNING THE ALARM OFF

1. Press **MODE**. **AL** appears.
2. Press **SET** or **SNOOZE**. and **Zz** disappear.

USING SNOOZE

1. When the alarm sounds, press **SNOOZE** to silence the alarm for 5 minutes. appears and **Zz** flashes.
After 5 minutes, the alarm sounds again for 1 minute. You can repeat it many times until you turn off snooze.
2. To turn off snooze, hold down any button. **Zz** stops flashing.

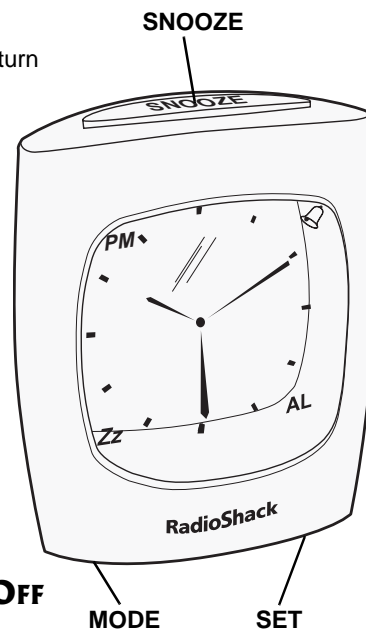

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99